U	C		B		▶	
	ECO.NO	ZON	ΙE	DETAILS	DESIGN	DATE
	00216					2012-2-28
	S19004			删除"Printed in China"		2019-4-19

Notes:

Material: 80g printing paper, white.size 290*210MM.
Printing: Black
Pack and tie a label with part number 0-ML00-0007-02-1.

				А	青嵘科技有限公司 A&R Technologies Ltd.								
DIMENSION OTHERWISE	TOLERANCES UNLESS	CLIENT			PAR	T NAME		英文	C版说明	明书]		
>5AND≤10		MOULD NO	SX-815E/810E		PART NO		0-ML00-0007-02-1						
>10AND≤2 >25AND≤5 >50AND≤1	50 +/-0.100mm	MATERIAL		REV	3	DESIGN	행	苞绮玲	DATE	2019-4-19	<u>[</u>		
>100AND		SIZE	/	SCALE	/	CHECK			DATE				
Angular	+/-0.25°	SHEET		UNIT	mm	APPROVAL			DATE				
0		Β			₽			-					

D

SX-815E/SX-810E X-TEC[™] Motion Sensor

Operation and Specifications

The SX-815E/SX-810E is a professional state-of-the-art motion sensor engineered with the world's best components and materials. Every aspect of this sensor provides the most reliable motion sensing with freedom from false alarms. The SX-815E/SX-810E includes two motion sensing systems: microwave Doppler motion sensing and PIR motion sensing. Together, the two systems' signals are evaluated by SUREN-proprietary signal processing

algorithms, which reject false alarm conditions while detecting intruders. The SX-815E/SX-810E microwave system includes a modern, compact, DRO-based micro-strip Doppler transceiver, with PCB "patch" antennas. The Doppler signal is digitally processed to detect intruders and reject distractions. Constant-motion signals (such as fans) are de-emphasized, and fluorescent light frequencies are digitally removed. On the PIR side, patented PYROFLEX™ IR detection provides much stronger intrusion signals than conventional detectors, thus providing an information-rich signal to the microcontroller. Inside the microcontroller, $\texttt{SureSpot}^{\texttt{M}}$ digital processing finds intruder signals among the complex curves and dips of realworld signal waveforms.

SENSOR INITIALIZATION

Following power-on, a SX-815E/SX-810E sensor is fully operational after a two-minute warm-up. During warm-up, its red alarm LED is ON.

WALK TEST: (RED LED)

Note: The SX-815E/SX-810E should be tested once per year.

In Normal Operating Mode: Enable the LEDs (JP1 ON). If the LEDs are not enabled, then, without removing power, set JP1 to ON. Walk across the monitored area (within the sensor's optical fields-of-view). With sensitivity set at STANDARD, the red alarm LED should turn ON (for Alarm) after about three to five normal steps. With the sensitivity set at HIGH, the LED should turn ON (for Alarm) after about two to four normal steps. Often, before the red LED turns ON, one of the single-system LEDs will turn ON. Each time the red LED turns ON, wait for it to turn OFF. Then, wait 12 seconds before continuing the walk-test. When there is no motion in the monitored area, the LED should remain OFF.

In Special Modes: Cycle power-off/power-on, then Walk-test immediately after warm-up with one of the 10-minute walk-test modes.

REMOTE LED ENABLE

The Remote LED Enable terminal functions exactly in parallel with JP1, in a logical OR arrangement. Thus, if either JP1 is ON or if the Remote LED Enable terminal is fed its LOW (active) voltage, then the LEDs are enabled. The LOW (LEDs enabled) voltage range is 0-1.5 Vdc. The HIGH (LEDs disabled) voltage range is 3.5-18 Vdc.

10-MINUTE WALK TEST MODES: SINGLE-SYSTEM TEST:PIR (Green LED), MICROWAVE (Yellow LED)

When JP1 is OFF, the function of each motion sensing system can be monitored separately during the first 10 minutes after power-on. To test the PIR system, set JP2 OFF, then walk across the monitored area (within the sensor's optical fields-of-view). Each time a field-of-view is entered, the green LED should flash. To test the microwave system, set JP2 ON, then move within the monitored area. During movement, the yellow LED should flash. Adjust RV1 to change microwave detection required. 10 minutes after power-on, all LEDs will be disabled. range as

ALARM PROCESSING

A PIR motion sensor works by counting signal events, often called "pulses". The SX-815E's/SX-810E's PIR system includes SureSpot™ to provide expert qualification of true intruder-caused pulses. However, the SX-815E/SX-810E dual-technology processing system does not simply count pulses. Instead, SUREN-proprietary processing includes expert algorithms for real-time analysis of the combined PIR and microwave signals. This provides the best intruder detection while rejecting false alarms.

SUPERVISION

SX-815E/SX-810E supervision functions include these tests:

- Ambient temperature in-range;
- Detector electronics okay; Supply voltage between 8-16Vdc; PIR self test okay.

When a failure is detected, then:

1) The red alarm LED blinks ON/OFF every second;

2) Alarm relay does not re-close after an alarm signal event.

3) Trouble output opens.

NOTE: The sensor will NOT initiate an alarm upon failure.

Limitations of Security Products: Security products and alarm systems do not offer guaranteed protection against burglary, fire, or other emergencies. They may fail to warn for diverse reasons, including (but not limited to): power failure, dead batteries, improper installation, coverage "blind spots", coverage areas overlooked during installation, defeat by technically sophisticated intruders, component failure, or inadequate maintenance. Alarm systems should be checked weekly to ensure that all devices are working properly. AN ALARM SYSTEM IS NOT A SUBSTITUTE FOR INSURANCE.

SUREN LIMITED WARRANTY

SUREN LIMITED WARRANTY SUREN Systems, Ltd., of Fo Tan, Shatin, Hong Kong, warrants its products to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for twelve months from the date of original purchase. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any part which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than Seller. For warranty service, return transportation prepaid, to SUREN Systems, Ltd., Unit 15, 12/F, Block B, Wah Sang Industrial Building, 14-18 Wong Chuk Yeung Street, Fo Tan, Shatin, Hong Kong. Seller has no obligation to attend the buyer's location to retrieve the goods or make repairs on site.


There are no warranties, expressed or implied, of merchantability, or fitness for a particular purpose or otherwise, which extend beyond the description on the face hereof. In no case shall seller be liable to anyone

©2008 SUREN Systems, Ltd.. All rights reserved. SUREN™, PYROFLEX™, SureSpot™ are trademarks of SUREN.

SPECIFICATIONS

Range: 15 meters

Sensor Optical View Pattern (side view, in meters)

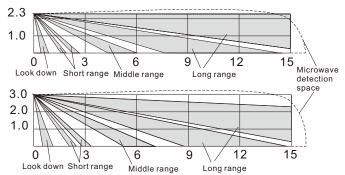


Optical Fields-of-View:

Long-range Short-range Mid-range Look-down 44 12 6 2

Sensor Optical View Pattern (top view, in meters)

Microwave detection area One FOV (field of view)

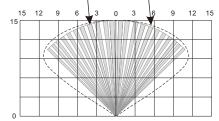

IR Sensor:

PYROFLEX™, Dual elements **Power Supply:**

8-16 Vdc; 15 mA at 12 Vdc

Alarm Relay: Solid state, 60V, 150 mA, 1500 V_{rms} isolation

Tamper Switch: Form A (NC). 50 mA at 30 Vdc

Trouble: Normally closed to (-), NPN open collector, 30 Vdc, 100mA

Housing Material: High-impact ABS

Dimensions: 112 x 50 x 42 mm (H x W x D)

Lighting Rejection: Selectable: 50 or 60 Hz

Complies with:

EN 50131-2-4 Grade 2, Class II

CE RoHS **Microwave Operating Freq:** Approx. 10 GHz. See unit label. **Events Detection:**

SUREN

SureSpot™ processing engine

RF Immunity: 20 V/m, 10-1000 MHz; 10 V/m, 1-2 GHz

White Light Immunity: 6500 lux

Sensitivity: PIR Selectable: 2-event or 3-event

Range: Microwave 20%-100% adjustable

Operating Temperature Range: -10°C to +55° C (+14°F to +131°F)

Storage: -40°C to +60° C (-40°F to +140°F)

Accessories: Mounting bracket: MB-101

Note: Specifications are subject to change without notice.

for any consequential or incidental damages for breach of this or any other warranty, express or implied, or upon any other basis of liability whatsoever, even if the loss or damage is caused by its own negligence or fault.

Seller does not represent that the products it sells may not be compromised or circumvented; that the products will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the products will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm system may only reduce the risk of a burglary, robbery, or fire without warning, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result.

Consequently, seller shall have no liability for any personal injury; property damage or other loss based on a claim the product failed to give any warning. However, if seller is held liable, whether directly or indirectly, for any loss or damage arising under this limited warranty or otherwise, regardless of cause or origin, seller's maximum liability shall not in any case exceed the purchase price of the product, which shall be the complete and exclusive remedy against seller.

This warranty replaces any previous warranties and is the only warranty made by Seller on this product. No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorized. Patents US: 7,141,910; 7,042,134; China: ZL 2005 3 0146970. 4, Patents UK: GB 2, 427, 270, Other Patents issued and pending worldwide

www.surensystems.com

SX-815E/SX-810E Installation Instructions

1: Mounting Location

A. Wall mounting:

- 1. Sensor base fastened flat on vertical wall (± 2 degrees)
- B. Bracket mounting:
- 1. Bracket fastened to semi-vertical surface (\pm 15 degrees)
- 2. Sensor on bracket in vertical position (± 2 degrees)
- C. All mounting:
- 1. Height = 2.3 m or 3m above floor of monitored area
- Clear line-of-sight from sensor to monitored area Note: glass will block PIR sensor's view; metal will block microwave sensor's view
- 3. Wall temperature similar to walls/floor of monitored area
- 4. Sensor aimed away from windows and reflected sunlight
- 5. Sensor aimed away from heaters or heater/cooler outlets
- 6. Sensor aimed so that likely intruder paths cross three views

2: Sensor Disassembly

2

In slot at sensor bottom, use screwdriver or thumbnail to (1.) Push inward on cover latch. (2.) Remove cover.(3.) Push outward on circuit board latch at sensor base right side. Using circuit board terminal block as handle,gently lift circuit board right side and remove.

depressions. 3. For bracket mounting. See 6 for more.

3: Base Hole Preparation

Identify necessary holes on diagram;

1. For wall mounting, knock out hole covers.

2. For corner or 45 degree wall mounting, use

drill to open at least two holes at base side

If cable ties will be added for wire strain relief, select holes needed, then clear out thin plastic material covering those holes.




6: Bracket Mounting

Use screws to mount bracket in desired location, use tool to open a 3 mm hole in the center of the square recess at the rear of the base. Use screw to mount sensor base onto bracket. Refer to 5 for setting circuit board alignment post.



9: PIR Motion Sensitivity; Microwave Range

With standard sensitivity, PIR detection occurs in 3 to 5 steps. With high sensitivity, detection occurs in 2 to 4 steps.

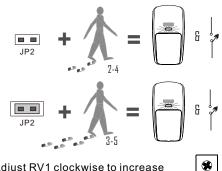

RV1

Adjust RV1 clockwise to increase microwave detection range.


4: Cable Preparation

Remove 8 cm of cable jacket. Pass the cable wires through the selected hole. Lay cable in wire channel. Secure cable with cable tie.



7: Circuit Board Installation


To replace circuit board, (1.) place circuit board left edge into two left-hand mounting slots in sensor base. (2.) On right-hand side, gently press circuit board into place until latch snaps over circuit board.Cut cable wires to appropriate length and connect wires/EOL resistor to sensor terminal block.

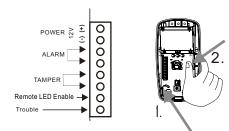


10: LED Indicator Operation

The chart below shows possible LED indications.

LED	SX-815E/	SX-810E			
	Sensor State	LED Display			
Red	Warm-up	ON			
	Alarm	ON 5 Sesonds (IF LED ENABLED)			
	Failure	Flashing			
	Normal	OFF			
Yellow	MW Event	ON			
	NO Event	OFF			
Green	PIR Event	ON			
	NO Event	OFF			

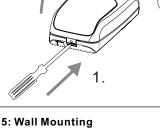

Use screws to mount on wall or in corner.

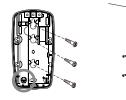

3.0m

Set circuit board alignment post in position "0" or "1" to select mounting height.





Alignment Post position "0" Alignment Post position "1 Use with: Use with:

Wide-angle lens

Use with: Wide-angle lens.

8: Operation Programming Jumpers

If there is a way for intruders to pass only a very short distance in the sensor's view, or if aggressive detection is required, then use high sensitivity (JP2=OFF). Otherwise, standard sensitivity (JP2=ON) is fine for ordinary applications. Set microwave lightimmunity jumper JP3 to local power frequency. Factory-set jumper positions are shown below in gray.

SX-815E/SX-810E						
FUNCTION	JP	ON	OFF			
Light Imm.	3	60Hz	50Hz			
Sensitivity	2	STANDARD	HIGH			
LED Enable	1	ENABLE	DISABLE			

